

Installation Steps

1. remove the factory radio and the fascia as shown



2. Unscrew the metal bracket



3. Remove the plastic holder and original clip for fixing the plastic



Need Technical Support?

Message our team on Whatsapp: 07770 814 793

Send your questions and photos so we can help you as quickly as possible.




Chat on WhatsApp

Installation Steps

4. fasten the plastic holder and clip onto the metal plate



5. Cut OEM dashboard in the positions shown in the picture. Unscrew the central screw on the bottom and remove this part to allow fitment of aftermarket radio

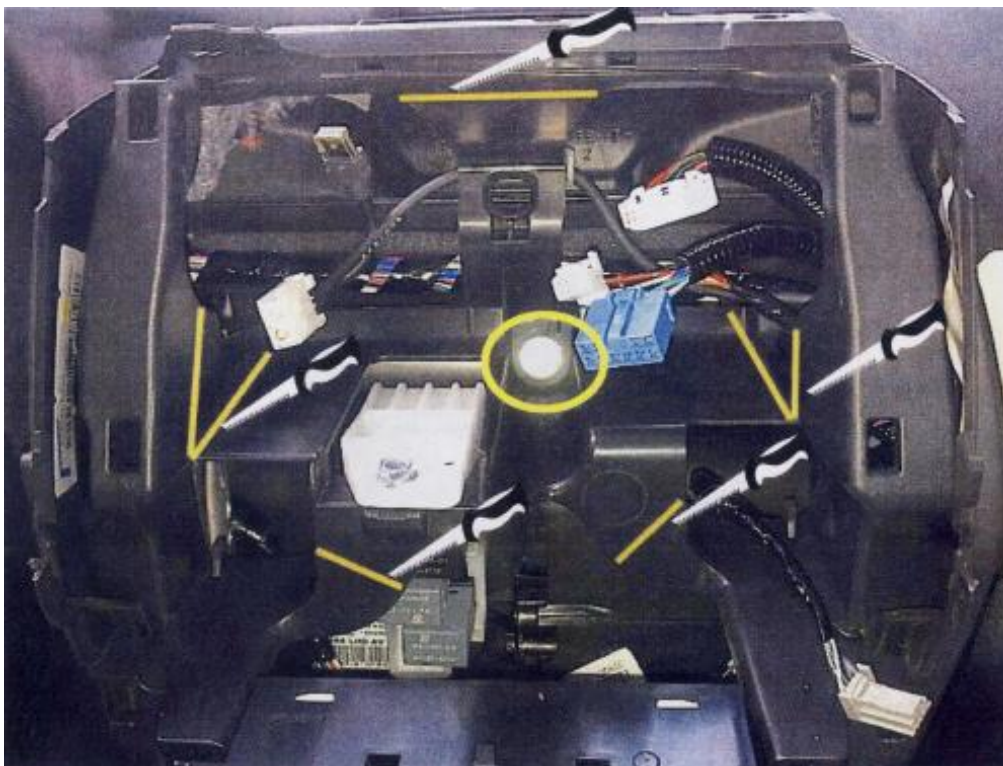

6. Mount the metal brackets onto the aftermarket radio

Need Technical Support?

Message our team on Whatsapp: 07770 814 793

Send your questions and photos so we can help you as quickly as possible.



Chat on WhatsApp

Installation Steps

7. install the aftermarket radio and reassemble the dashboard on the car in reverse order to finish installation



IMPORTANT:

Use aftermarket radio with depth of no more than 150 mm

Need Technical Support?

Message our team on Whatsapp: 07770 814 793

Send your questions and photos so we can help you as quickly as possible.



Chat on WhatsApp